





Landing gear control unit manual


一, Introduction:

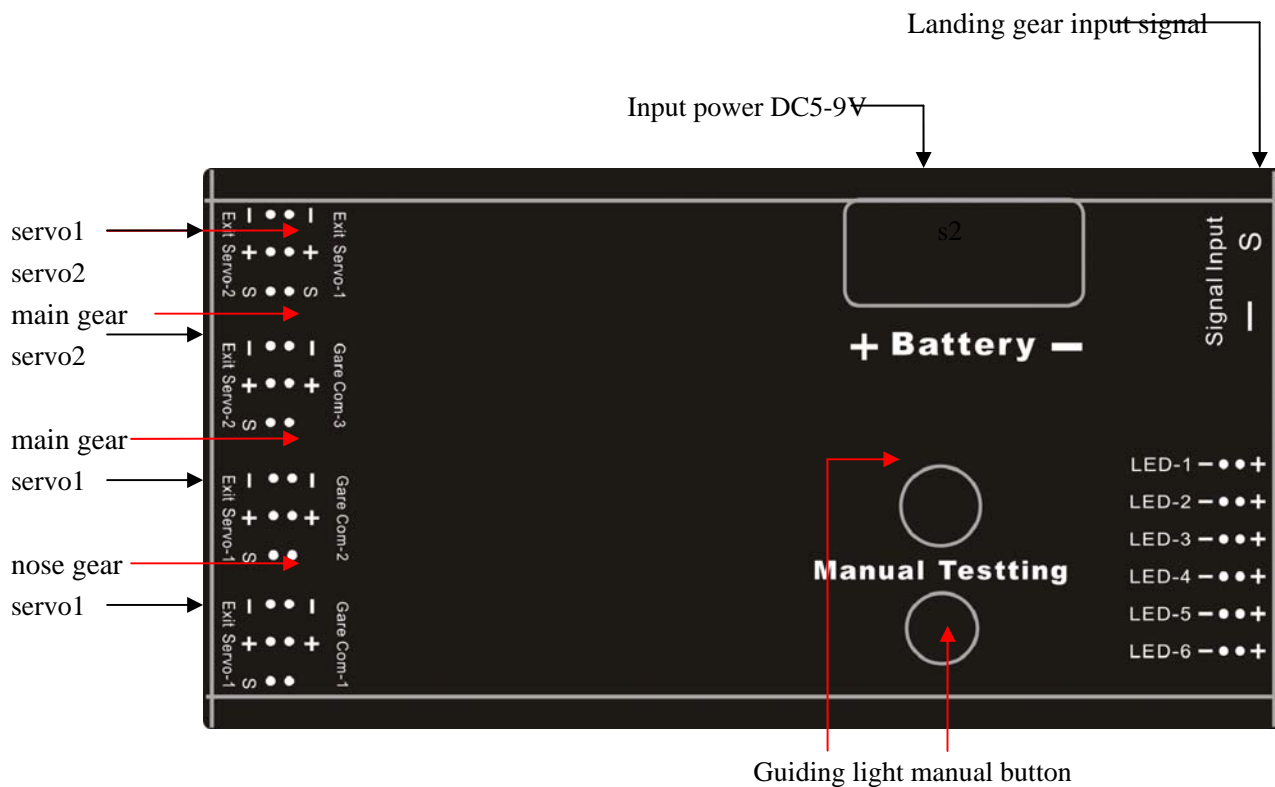

1, Connection:

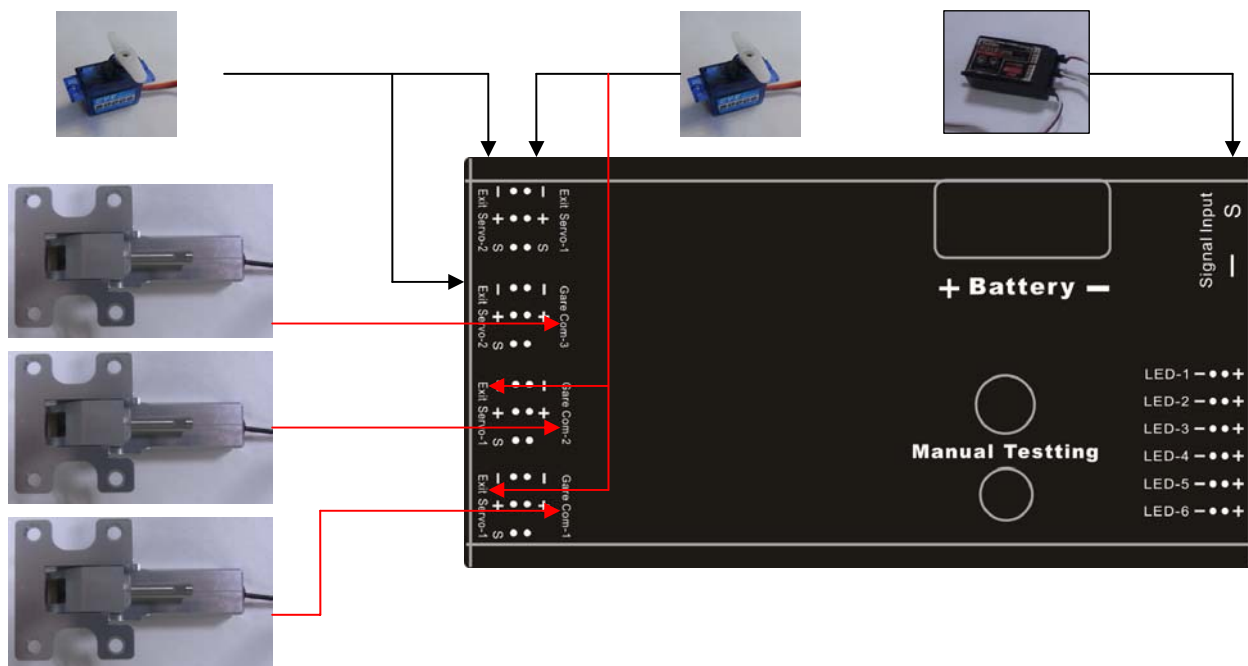

2, Connection

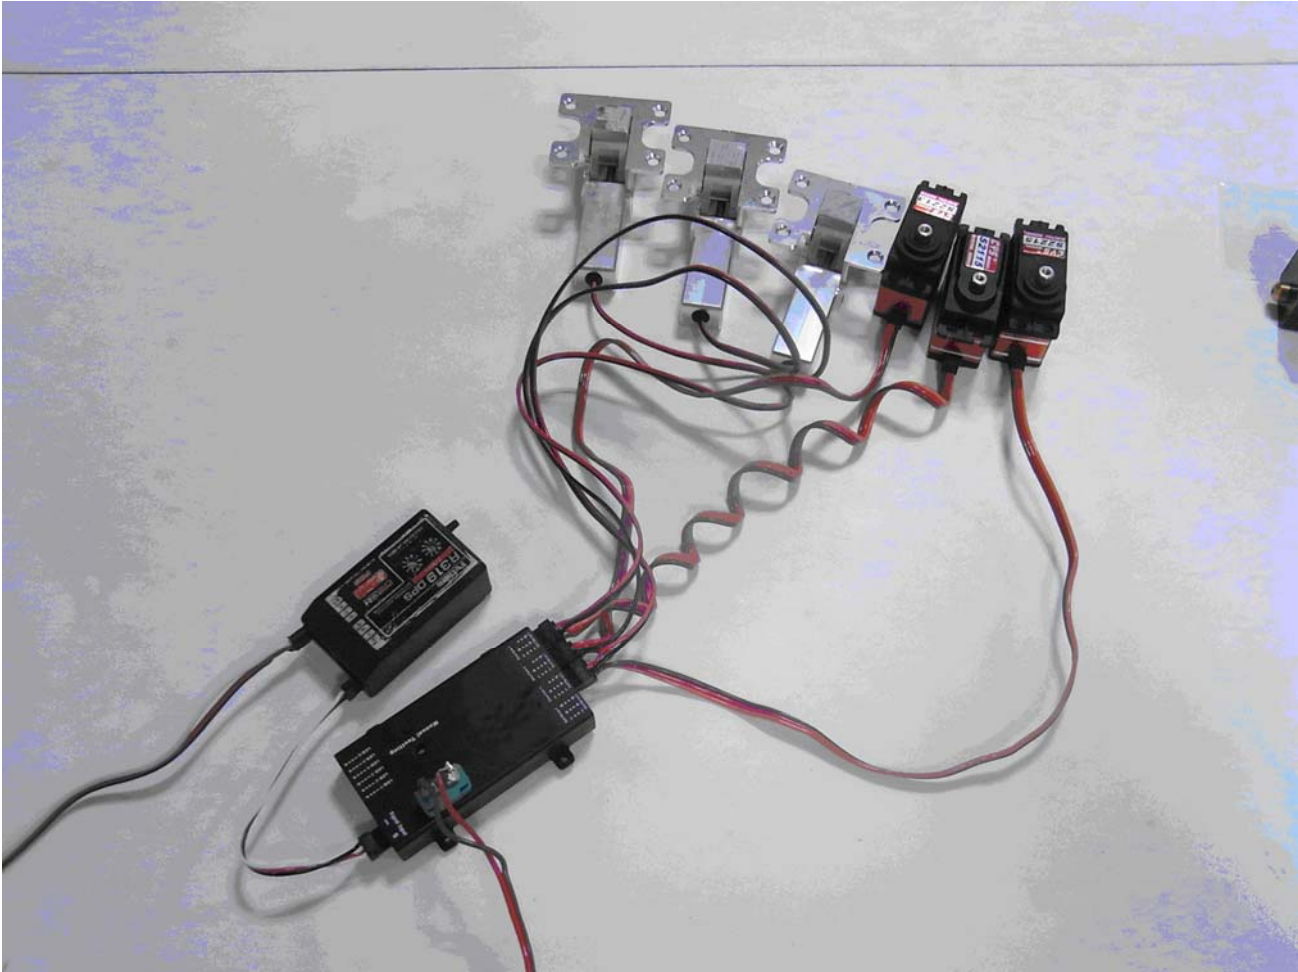

二, Operation Step:

1. Connect power (DC 6-9V), landing gear, radio and control unit as photo shown.
2. Press testing button, landing gear start to work, light on means landing gear down, light off means landing gear retracted.
3. Operate corresponding radio functional button, landing gear start to work, light on means landing gear down, light off means landing gear retracted.

三, Data

- 1, Input voltage range: DC 5V - 9V。 .
 - 2, Stall current: 1.8A。
 - 3, Maximum working current: 4A。
- 3, Input signal pulse range: 200US----2500US。 (300-1200, gear down, 1700-2500gear retracted.)

FeiBao Jet Models Co Ltd

www.fbjets.com

info@fbjets.com