



FB Jets Dolphin S

FB Jets / Feibao

Dolphin S Assembly Manual



Written By Rich Miller in Collaboration with Fei Bao Jets

Cover Photos by Robert J. Engle

Rev. 0



Contents

DISCLAIMER:	4
Introduction	5
Specifications	7
Component Size (Length)	7
Adhesives	8
Standard Pneumatic LG Systems	8
Optional Electric LG Systems	8
Parts List:	8
Optional Equipment	9
Additional Equipment	9
Optional Equipment (Builders choice)	9
Servo List (Hi-Tec) based on 6V torque specifications	10
Servo List (JR) based on 6V torque specifications	10
Construction	10
Pneumatic Landing gear	11
General	11
Step 1: Nose Gear	11
Step 2: Main Landing Gear	12
Step 3: Forward Fuselage	13
Optional Battery Box	14
Step 4: Fuel Tanks	14
Tank Assembly	16
Tank Mounting	17
Saddle Tanks:	17
Optional Mounting:	17
Step 5: Final Fuel System plumbing:	20
Step 6: Air Tank Installation	21
Step 7: Aft Fuselage	21
Step 8: Wing – Servo Installation	22
Step 9: Vertical Fin and Rudder servo installation	24
Step 10: Horizontal Stabilizer and Elevator servo installation	25
Front equipment tray	27
Step 12: Turbine Mounting Rails and Tail Pipe	28
Step 13: Turbine Accessory Installation	28
Step 14: Cockpit	29



Step 15: Radio Channel Assignments	30
Step 16: C.G.	30
Step 17: Setting of throws	31
Maintenance Tips:	31
Annex A Drawings	32



DISCLAIMER:

THIS IS NOT A TOY

This is a high-performance miniature aircraft, capable of high speeds and damage to life, limb, and property. The manufacturer and its distributors and author of this manual cannot control how you assemble this model, what equipment you use to fit it out, or how you fly it, and can assume no liability whatsoever for any damages that may occur when you fly your aircraft. By assembling this model, you are agreeing to indemnify and hold blameless the manufacturer and/or his agents from any and all torts and liability associated with the use of this product.

Please inspect all parts before beginning assembly. If any part appears to be suspect, contact your dealer or the manufacturer for repair or replacement **BEFORE** you begin.

Once you have assembled the aircraft, you are the pilot in command and assume any and all responsibility for the use of the model and any damages that might occur by flying or attempting to fly this aircraft.

R/C model jets require a high level of skill in both their assembly and their flying. If you do not feel confident in either your building or flying skills, **PLEASE** seek assistance from more experienced modelers. It is a wise idea, no matter what level of skills you possess, to have a second experienced modeler go over your installation after assembly. A second set of eyes may spot a problem you have missed. If you have not flown a high performance model like this before, it is **HIGHLY** recommended that you get an experienced turbine pilot to do your maiden flight. Very often, the first few seconds of a maiden flight are critical until the aircraft is trimmed out, and having an experienced pilot at the controls can make the difference between a wrecked aircraft and one that enjoys many hundreds of flights. Be sure to select a suitable field for flying...take the time to find a large paved runway if at all possible, especially for test flights, until you feel comfortable getting the aircraft in and out of smaller grass fields.

Note: In the USA it is mandatory that you belong to the Academy of Model Aeronautics and hold a valid Turbine Waiver, please check the local governing rules for operation of R/C model jets of your location before flying.

Congratulations on your purchase of the FB Jets Dolphin S



Introduction

You have chosen a model that represents the pinnacle of ARF technology and factory testing with the new manufacturing processes implemented by FB Jets. While there is not a lot of building to do, there is enough to keep you busy for quite a few evenings. Even if you have assembled other ARF jets, we highly recommend following the assembly sequence and procedures presented in this manual.

Please remember that just because the model is almost completely built it does not mean that you can rush through the final install / assembly. It is this authors recommendation that any factory installed systems such as hardware, linkages, fuel lines, retracts, wheels and brakes, be inspected for any possible defects, loose parts etc., and all fasteners should be secured with Loctite. Wheels and brakes should be checked for lubrication and for proper fit to the axel; threads on linkages should be inspected for tightness.

The Dolphin S was designed to be modular to make for easy transportation, see “component size” in the specification section. The forward and aft fuselage sections bolt together with four bolts. The thrust tube (pipe) remains in the aft section of the fuselage when the halves are separated.

When attaching the front and rear halves of the fuselage, the thrust tube can be slid towards the back to allow clearance to gain access to the four fuselage mounting bolts. After joining the two halves, the thrust tube can then be slid forward to allow the mounting tabs of the bell mouth to be screwed to the motor mount rails.

The Vertical fin is easily removed / installed utilizing the two internal clamping mechanisms that are easily tightened with hex (Allen) wrenches through the access holes in rear fuselage as shown.



The right horizontal stabilizer has an integral carbon fiber spar, the left has a built in tube socket. Both have an anti-rotation pin located towards the leading edge. The right stabilizer is inserted into the integral tube in the aft section of the fuselage. Upon complete insertion, the spar will protrude through the fuselage allowing the left stabilizer to be slid onto the spar tube. The left stabilizer is then attached with one allen bolt into the CF spar, the spar bolt location is shown in photo, the retaining bolt is inserted from the bottom of the left stabilizer.



The wings utilize one carbon fiber main spar and have two anti-rotation pins, with one towards the front and one towards the rear of the root rib. The main spar has a 4 mm tapped hole in each outer end, there is a hole location in of the wings that accepts a flat head 4 mm bolt to secure the wing spar, location shown in photo.



When the model is completely taken apart it will fit in a small area for transportation.



Specifications

Total Length: 92 1/8" (2340 mm)

Total Wingspan: 81 5/8" (2073 mm)

C.G. Location 28% MAC: 10 1/2" (267 mm) from LE of Wing

Prototype Dry Weight with all components: 30 lbs (13.6 Kg)

Thrust Class: 22 to 36 lbs (100N to 160N) "Jet Central Cheetah used in prototype"

Servos for Flight Surfaces & Steering (8)

Servos for pneumatic controls (2) or pneumatic valves

Fuel Capacity Right and Left Saddle Tanks: 34 oz ea (1000 ml ea)

Supplied Center Tank 68 oz (2000 ml)

Total Capacity 135 oz (4000 ml)

Component Size (Length)

Vertical Fin – 16 3/4" (425 mm)

Horizontal Stab (ea.) – 14 1/2" (368 mm)

Wing Panel (ea.) – 35" (890 mm)

Canopy – 39 1/2" (1003 mm)

Forward Fuselage – 62 1/8" (1578 mm)

Aft Fuselage – 30" (762 mm)

Total Pipe Length with Bell Mouth: 37 1/2" (952.5 mm)

Main Tire Diameter 3 7/8" (98 mm)

Nose Tire Diameter 2.9" (74 mm)

Preliminary Steps before you begin

Keep this in mind as you proceed

Look at EVERY assembly step you finish, and ask yourself:

"Could this cause a malfunction and crash my aircraft?"

A chain is only as strong as its weakest link, and this is a high-performance aircraft that will be intolerant of sloppy assembly techniques. Even the smallest component is important and can cause the loss of your airframe, so take the time to do things right, or redo them if they are wrong. Careful work will result in a long lasting aircraft that will give you years of pleasure, one loose component could result in the complete loss of the aircraft and all of the component inside of it, additionally someone could even get hurt. So please pause every once in a while when building and double check your workmanship.

- Clean and inspect all parts. Inventory them against the parts list at the end of the manual and notify the kit supplier of any missing components as soon as possible.
- If the paint scheme you have selected is glossy, it is recommended that you apply a coat of wax. This will help resist dirt, stains and fingerprints during construction, and will provide some limited protection against errant glue.
- Vacuum out the remnants of packing materials that remain in the fuselage.



Adhesives

The author prefers Loctite Hysol 9462 adhesive for all procedures. This is a very strong epoxy that is thixotropic. “Thixotropic” means it does not run at all, but stays only where you put it. It is superior to regular epoxy, even slow setting epoxy, because of this characteristic. Regular epoxy will run with gravity as it dries, taking it away from where it is supposed to be. The downside of Hysol is it takes overnight to dry properly. It is recommended that you only use a proper Hysol dispensing gun and only the long-type mixing nozzles.

Be careful if using adhesives such as “shoe goo” or Zap-a-Gap-a-Goo, as these contain solvents that may attack the fiberglass and could ruin the surface finish of your model.

Standard Pneumatic LG Systems

Pneumatic retracts typically are the number one maintenance issue with most models however with proper installation procedures and preventive maintenance this need not be the case. The Dolphin S uses pneumatic retract and brakes. If you follow a few tips you should have a very reliable leak free operation. Factory installed systems should be inspected for kinked lines, proper insertion of hoses on fittings and the hose routings should be neat and secure. Special attention should be made to ensure that the length of tubing at “T” fitting is equal to both sides to ensure balance operation, especially in the brake system. Take special precautions to route hoses away from moving landing gear parts and hot engine areas. It is recommended that the factory valves, cylinders and brakes be disassembled, cleaned and lubed with a good O-ring lubricant to ensure reliable operation.

If installing your own pneumatic components it is important to make all cuts in the pneumatic tubing dead square before installing on the nipples, also make sure that the lines are pushed all of the way onto the nipples. They should not need to be secured otherwise however you can add fine safety wire for extra security.

Optional Electric LG Systems

FB Jets offers optional electric retracts for this model.

Parts List:

Major components

- Fuselage front Section with nose retract installed
- Fuselage aft section
- Canopy
- Forward and Aft Equipment trays
- Right and Left Wing panels with main retracts installed
- Right and Left Horizontal Stabilizer
- Vertical Stabilizer
- Tail Pipe with Bell Mouth
- Right and Left Saddle Tanks
- Center Tank
- Tank Hardware/Heavy Clunks/Aluminum Bung Fittings
- Linkages / Hardware kit
- Air Kit: Tanks, Lines, Valves, Fittings



- 79" (200cm) Blue Air Line
- 79" (200cm) Red Air Line
- 79" (200cm) White Air Line
- 79" (200cm) Yellow Air Line
- 3 Three port valves (Gear & Doors)
- 1 One Port Valve (Brakes)
- 2 Air Tanks
- 1 Fill Fitting
- 6 Three port Y's
- 4 four port Tees
- 4 Disconnects

Optional Equipment

- Sport Scale Cockpit
- Electric Retracts Optional

Additional Equipment

While the kit is comprehensive, there are additional parts required as follows:

- Turbine – 22 to 36 lbs. (100N to 160N) “Jet Central Cheetah used in prototype” (Users Preference of Manufacturer)
- Radio System (Users Preference of Manufacturer)
- Servos (Users Preference of Manufacturer, See List on next page)
- Servo Extensions Various Lengths depending on equipment locations
- Servo lead bulkhead connectors (ideal for fuselage junction and wing connections)
- Batteries / Regulator / Switch / Power system
- Adhesives (Thin CA, Medium CA, Hy-Sol, Loctite Red/Blue)
- 3/16" Tygon fuel line
- 3/16"(5 mm) Brass Fuel Line (K&S P/N 1147) 5 mm (K&S P/N 3923)
- S.S. Tie wire
- Ty-Raps
- Bulkhead fittings (Fuel Fill and Vent Fittings)
- Miscellaneous small screws
- Sullivan 4-40 Gold-N-Clevises or equivalent
- UAT (optional / but highly recommend)
- Air Pressure Gauge(s)

Optional Equipment (Builders choice)

- (Optional Internal Finishing) Grey Primer and Paint such as RUST-OLEUM Stone Textured Paint (Grey)



Servo List: (Hi-Tec) data based on 6V torque specifications

- Ailerons: (1) HS-5625MG or HS-7985MG
- Elevator: 2) HS-7955TG
- Flaps: (2) HS-7955TG
- Rudder: (1) HS-7955TG
- Nose Steering: (1) HS-645MG or HS-5645MG
- Mechanical Retract Valve: (1) HS-225 (MG) or Electronic Pneumatic Dual Action Valve
- Mechanical Brake Valve: (1) HS-225 (MG) or Electronic Pneumatic Single Action Valve

(JR) data based on 6V torque specifications

- Ailerons: (2) DS8411
- Elevator: (2) DS8611A or DS8711
- Flaps (2) DS8611A or DS8711
- Rudder: (1) DS8611A or DS8711
- Nose Steering: (1) 4721
- Mechanical Retract Valve: (1) 351 or Electronic Pneumatic Dual Action Valve
- Mechanical Brake Valve: (1) 351 or Electronic Pneumatic Single Action Valve

Construction

The order of construction may be changed to suit your personal preference; however, due to the size of the Dolphin S it is recommended to complete as much of the work as possible on the individual components before the final assembly. The majority of the assembly takes place in the forward fuselage section. It is recommended installing a servo lead bulkhead connector at the fuselage junction; this will allow easy disassembly for transportation.

The prototype used for the creation of this manual utilized a standard DB-9 "D-Type" connector (See photo); however, any connector system could be utilized.

Note: If using individual servo extensions, it is a good idea to mark each lead with an identifier to aid during assembly.

Aft Fuselage



Front Fuselage



The proto type's wing connections also utilized DB-9 D-Type connectors for the connection of the servos, when the wing is slid onto the spar and mates with the fuselage the servo connections are made.



Fuselage Center Root section



Wing Root section



Note: any fiberglass surfaces on the inside of the airframe that requires components to be bonded should be cleaned with mild detergent and water to make sure that any mold release agent is removed, and then scuffed with medium grit sandpaper in the area of the intended bond to promote adhesion prior to applying the adhesive.

Pneumatic Landing gear


General

The landing gear are pre-installed from the factory; it is recommended that the all retract units should be removed and inspected for air leaks. This is easily done by submersing the retract unit in a pan of water and applying pressure to each of the cylinder inlets while maintaining pressure see if any air bubbles are detected. If leaks are detected they should be corrected by disassembling the cylinders, cleaning, and applying O-ring lube, then reassemble and re-test.

Check the function of each gear with a hand pump or other suitable air source while they are removed from the airframe. Make sure the extension and retraction of the gear is smooth before final installation. Check for free rotation of the wheels on the axels, the wheel bushing will require lubrication or even may require reaming of the I.D. of the bushings to create a better fit.

Step 1: Nose Gear

- Remove nose gear from fuselage and perform leak checks as describe above.
- After performing the above checks, assemble the steering servo into the nose strut steering bracket as shown using the supplied mounting hardware. The servo is mounted from the top side of the bracket to get better alignment with the provided holes for the strut control horns; the servo output shaft is mounted away from the strut.

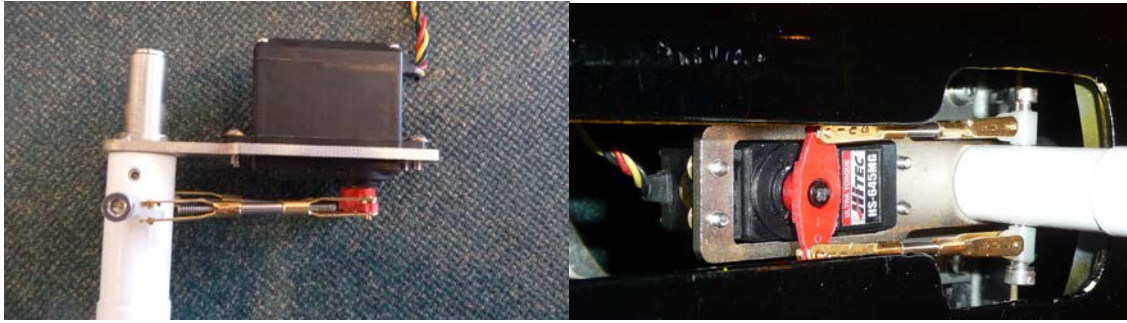

- Using a receiver or servo driver find servo neutral and attach a suitable double sided servo arm perpendicular to the servo making sure to tighten the servo arm screw.
- The threaded rod supplied with the kit was 2-56 style all thread and clevises as shown in the photos, it recommended to change these to 4-40 parts.

Step 2: Main Landing Gear

- Remove main gear from wings and perform leak checks as describe above.
- After performing the above checks, reassemble the main gear back into the wings using the supplied screws or replace with builder supplied optional allen head bolts and blind nuts.





Step 3: Forward Fuselage

- Once the nose gear and servo assembly is completed, install the retract unit back into the fuselage , prior to installation place a very small dab of thin CA into the mounting screw holes first if using the factory provided sheet metal type screws.
- Airline routing should be neat; it is recommended that the pneumatic valve equipment be installed as far forward in the fuselage as possible. The prototype was built utilizing a Jet Central electronic dual action valve for the retracts and a Jet Central electronic single action valve for the brakes. Remember to keep equal lengths of air lines when creating the right and left side run to the retracts and brakes to ensure even operation.
- The Dolphin S is supplied with brass airline connectors, the prototype used the male end of the fittings glued into the fuselage at the wing junction for easy wing connections. The female ends were left loose with extra length of tubing protruding from the wing halves. A 1:1 scale drilling template and C.C fixture was created to locate the male connectors in the wing root area of the fuselage and can be found in Appendix A of this manual.



Battery Mounting

The choice of the battery technologies to be used is up to the builder's discretion. The goal of the build was to achieve proper C.G. without the need to add dead weight. The prototype model required that weight needed to be located as far forward as possible to achieve the proper C.G.

To achieve proper balance, two 5000 mAH LiPo hard case packs were used; one for the ECU, and one for the receiver. A voltage regulator was used to create the required voltage level for the radio system.

It is recommended that the batteries are mounted in a position to allow for easy removal for charging and maintenance no matter what technology is used. There are many methods available to secure the batteries, a few include mounting with adhesive backed Velcro™ or using zip ties such as ty-raps on removable mounting plates etc. It is the builder's discretion to provide the proper securement method to ensure safe operation, maintain proper C.G., and allow quick access in case of battery emergencies.



Optional Battery Box

- The prototype was constructed using two lite plywood battery boxes; these allow quick removal of Li-Po batteries for charging and maintenance and provide a method for achieving correct C.G. balancing without the need for added dead weight. The components can be cut from the templates in Annex A from 1/8" lite plywood. Lite-ply is very strong when constructed into shapes such as the box.
- Assemble the battery boxes using CA, see photo for detail.
- Trial fit the battery box through the front former, if there is interference open up the area using a Dremel tool or file.
- After establishing a good fit, Hysol the battery boxes in place.
- The batteries are held in place with a 1/4" wood dowel that is positioned in the front of the battery box, the dowel is held in position by a small wood screw.



Step 4: Fuel Tanks

If your model is provided with a factory plumbed fuel tanks it is recommended that you disassemble and inspect the tank hardware.

The author recommends that the factory supplied brass tubing should be replaced if it is not at least 3/16" (4.76 mm) in diameter. Additionally fuel line barbs should be soldered to the tubing and this can be achieved by cutting 1/4" (6mm) lengths using the next size of telescoping brass tube, i.e. 7/32 (5.5 mm), this will prevent the fuel line from sliding off of the brass tubing. This change will require that the supplied metal tank fittings to be drilled to accept the larger brass tubing or can be upgraded to the Sullivan Aluminum stopper kit #S478 which includes the larger 3/16" tubing. It is also recommended to use 3/16" Tygon™ tubing or equivalent for all of the interconnections of the fuel system. Finally perform a leak check on each fuel tank prior to installation; this short process up front could save a lot of time later.

The fuel system was assembled connecting the three factory supplied tanks in series, in this configuration it is imperative that the larger diameter tubing be used to reduce the restriction



FB Jets Dolphin S

developed in the fuel system. All fuel system lines should be properly inserted onto the tubing and safety wire tied to prevent unwanted and potentially harmful leaks.


Note: Restriction in the fuel system may cause performance issue with your turbine such as not allowing proper full speed RPM, abnormally high pump pulse width numbers and or excessive stress placed on the tanks while fueling the model. Stress on the tanks is due to expansion caused by air not venting out of the tanks fast enough during fueling. Additionally fuel restrictions or leaks on the suction side of the fuel pump can cause cavitation, leading to air ingestion in the turbine fuel supply, ultimately causing a flame out.

Total Fuel System Volume of the supplied tanks with the prototype was 135 oz (4000 ml)

Saddle Tanks ea. : 34 oz. (1000 ml)

Main Tank: 68 oz. (2000 ml)

Larger diameter tubing and drilled out tank hardware, Fuel line barbs soldered onto the tubes

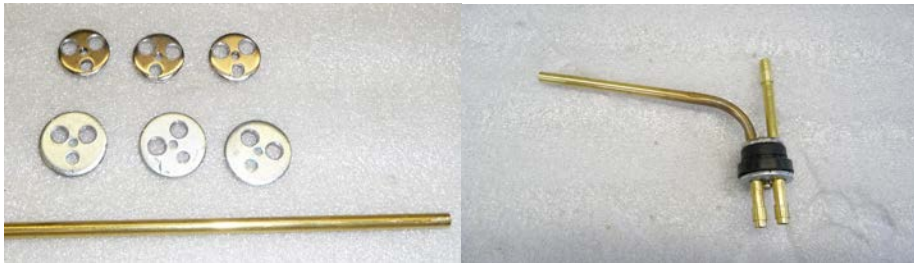

Factory supplied saddle and main tanks.





Tank Assembly

When working with brass tubing components please follow the steps outlined below:

- Use a small, round file or a #11 X-acto knife to remove the excess metal inside of the cut ends of the tubes. You will need to inspect the ends of all tubes. Another good method is to use a countersink tool to de-burr the tubing, as you want to create an internal chamfer.
- Make sure to install fuel line barbs, checking the ends of the brass tubing to make sure any sharp edges are removed that could potentially cut the Tygon tubing causing leaks.
- When finished, make sure to blow out any metal fragments that may have been left behind and clean up any sharp edges.
- While the components are apart, or re-fitting with new larger tubing, check the fuel pickup line for equal lengths in both saddle tanks. They should be long enough to reach the back of the tanks without being so long as to restrict their ability to move to the top of the tank when the aircraft is inverted.
- Make sure the bends created for the vent tubes have not restricted airflow to any significant extent.
- Check the Tygon for any nicks or cuts, secure to the tubing with safety wire to the fuel clunks and the pick-up tube.
- If the aluminum tank bung fittings have not been fitted to the tanks, the tanks will need to be prepared. Make sure the entrance hole is large enough for the bung. Sand the tank in the area where the bung will be fitted. It is a good idea to drill a series of small holes around the periphery of the aluminum bung flange to promote securement of the adhesive. Finally using Hysol, glue the bungs to the tanks allow time for a complete cure before proceeding with the completion of the tanks.
- Once the tanks are back together, they should be leak checked before installation in the aircraft. Connect extra lengths of fuel tubing to the fuel and vent lines and submerge the tank in water. Pinch off one line and gently pressurize the tank by blowing into the other, looking for signs of air bubbles. If the tank shows evidence of air leakage around the vent cap, tighten the screw and check again. If the fiberglass weave is leaking; repair with Hysol or epoxy or apply a layer of glass cloth and epoxy resin.



Tank Mounting

It is recommended that the fuel tanks are mounted to allow for removal for future maintenance. There are many methods available to secure the tanks, a few include mounting with adhesive backed Velcro™ or tack glue using a few dobs of RTV.

Saddle Tanks:

- The main and saddle tanks are located as shown; it is the builder's discretion to provide the proper securement method to ensure safe operation.



Optional Mounting:


The method used for the prototype utilized plywood mounting brackets; templates shown in Annex A may be used to fabricate them. If this mounting method is desired the following will guide you through the steps.





UAT / Optional Smoke Tank Tray

The tray features an integral UAT holder and provides a surface to mount an optional smoke tank.

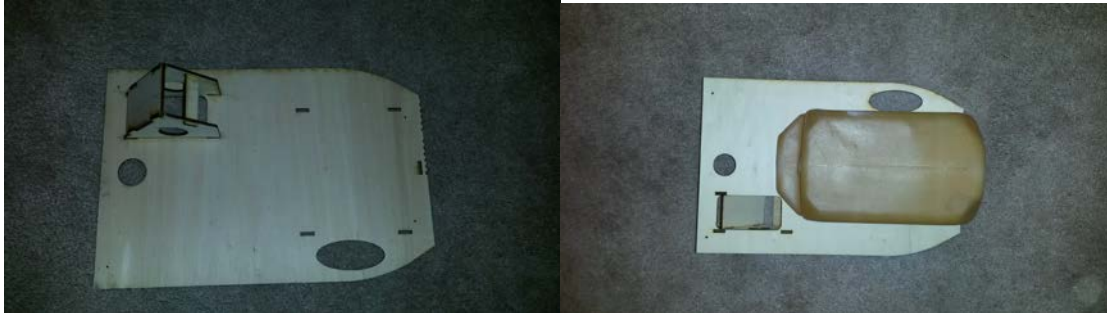


- The plywood tank holders shown can be fabricated from the supplied template in Annex A utilizing 1/8" (3mm) plywood. The saddle tanks use a mount on the front of the tank to secure them.
- Trial fit the saddle tanks as shown in the above photo sequence, mark the area on the front of the tanks where the front plywood mount pads will be positioned, and also mark the area on the fuselage where the front fuselage saddle tank mounts will be positioned. Sand the areas with medium grit sand paper.
- Install a blind nut into the tank mount pad, a second tank mount pad will be used for a spacer, glue the two pads together and then bolt the tank mount pad to the main tank fuselage mount. Make sure that the bolt does not protrude past the back surface of the blind nut, if so file/grind to flush as this surface will be glued to the saddle tank.




- Position the saddle tanks to their final place.
- Apply Hysol to the fuselage former tank mount and to the back side of the tank mounting pad that is bolted to the fuselage mount. Position the fuselage mount into the fuselage making sure the pad is in contact with the front surface of the tank, let dry, see photo.
- Repeat step for the other saddle tank, let dry.
Once the glue is dry the bolt can be removed to allow the tank to be removed for service work, see second photo.



Front Saddle Tank Mount

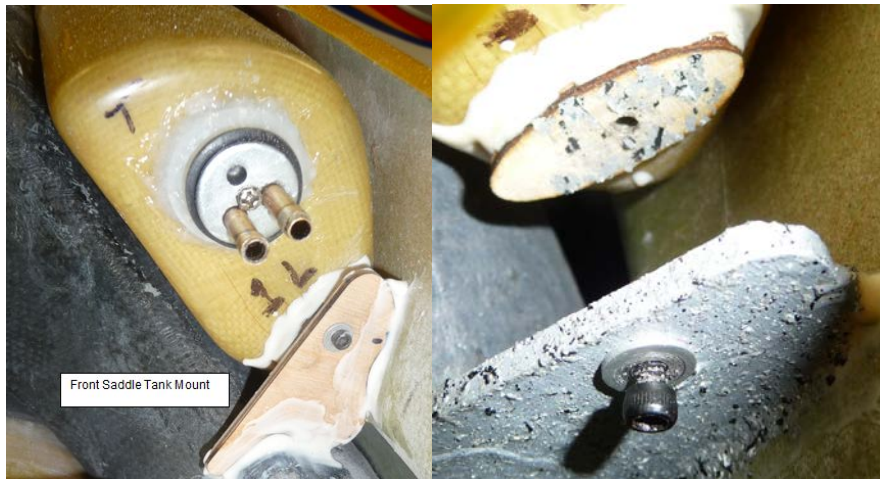

Main tank brackets & UAT / (Smoke Tank) Tray

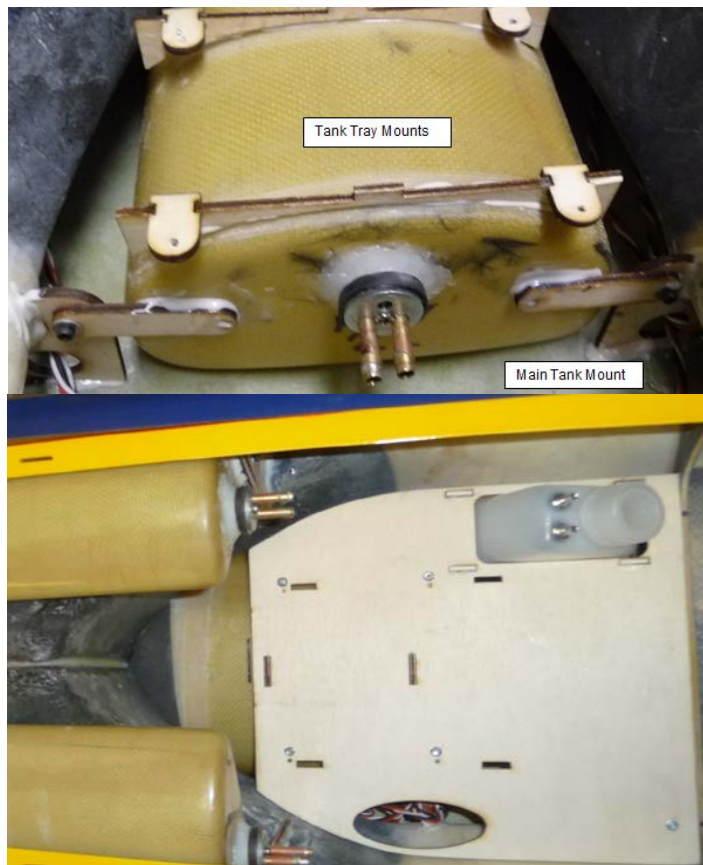



- The main tank mounts and UAT tray (Smoke Tank Mounting tray) can be fabricated from the supplied templates in annex X utilizing 1/8" (3mm) plywood.
- Trial fit the main tank as shown previously in the above photo sequence, mark the area on the front of the main tank where the two plywood mounting straps will be positioned, also mark the area on the fuselage where the front fuselage main tank mounts will be positioned. Sand the areas with medium grit sand paper.
- Install a blind nut into the back side of the main tank mount, bolt the tank mounting straps to the main tank fuselage mount.
- Position the main tanks to its final place.
- Apply Hysol to the fuselage former main tank mount and to the back side of the tank mounting strap that is bolted to the fuselage main tank mount. Position the fuselage mount into the fuselage making sure the tank strap is in contact with the front surface of the main tank, let dry, see photo above.
- Repeat step for the other main tank mount and strap, let dry.
- Once the glue is dry the bolt can be removed to allow the tank to be removed for service work.

Step 5: Final Fuel System plumbing:


- Starting with the UAT, the supply line to the UAT is connected to the clunk line of the left saddle tank,
- The vent line from the left saddle tank is connected to the clunk line of the main tank,
- The vent line from the main tank is connected to the clunk line right saddle tank,
- The vent line from the right saddle tank is connected to the vent fitting that exits the fuselage.
- The check valve fuel filler is connected to the other UAT fitting for system fueling.
- The center line from UAT is connected to the fuel pump.
- Make sure to safety wire all connections at this time.
- If you use plastic wire ties (Ty-raps) to bind the fuel tubes together for a neater installation, make sure not to over-tighten and pinch down on the flexible fuel tubing.





Step 6: Air Tank Installation

The air tanks can be installed in various locations in the airframe, the location used in the prototype was in the area below the front tray using formers cut from 1/8 (3mm) plywood) see photo. There are many methods available to secure the air tanks, a few include mounting with adhesive backed Velcro™ or tack glued in place with RTV, RTV was used in the prototype and can be cut in case the tanks need to be removed for service.

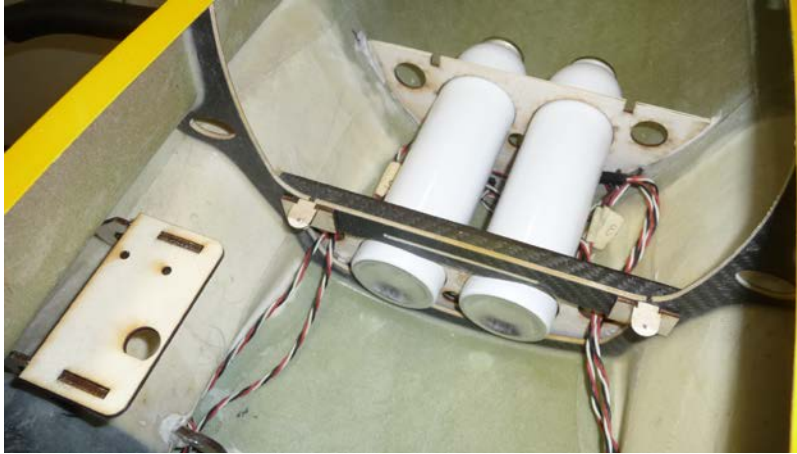

Step 7: Aft Fuselage


The aft fuselage section is complete from the factory with all of hardware installed, the only item left to the builder is the installation of the builder supplied wiring harness and if desired an optional connector bracket, see photo, the template for the bracket is in Annex A.

The female servo connectors were cemented into plywood disks and cemented into the circular cutouts in the fuselage for easy connections.





Fuselage Connector Mount

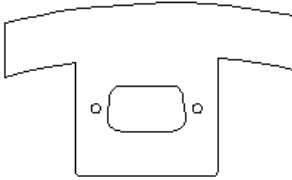


Step 8: Wing – Servo Installation

- The two wing halves are supplied with two pre-slotted servo hatches, eight “L” mounting brackets, and mounting hardware.



- The Flaps and Ailerons have slots pre-cut into the surface for the fiberglass control horn. The horn should be glued in with Hysol, before doing so make sure to use medium grit sand paper or dremel tool to roughen up the area on the horn where the adhesive will make contact.

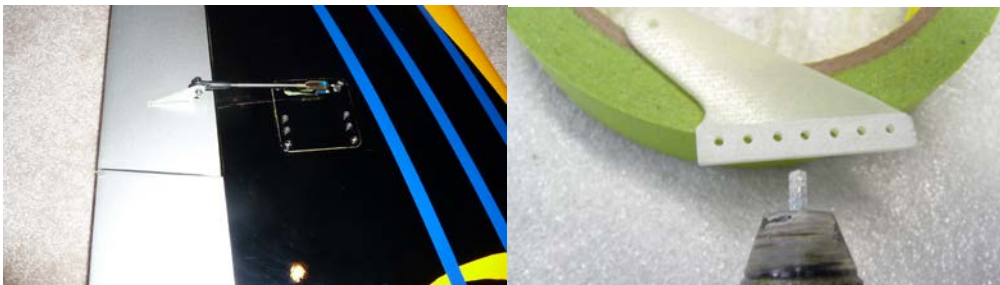

- A uniform adhesive fillet should be created around the control horn and the control surface. It is helpful to use masking tape around the periphery of the control horn slot. Any extra adhesive should be removed. Let the control horn adhesive setup undisturbed before proceeding.
- The spline of the aileron servo will face towards the wing tips and closest to the leading edge of the wing,
- The spline of the flap servo will face towards the wing tips and closest to the leading edge of the wing.




- It is not recommended to use the rubber grommets supplied with the servo for the mounting into jet airframes as vibrations typically associated with reciprocating power plants are not an issue.
- Using a receiver or servo driver, find servo neutral and attach a suitable single sided servo arm perpendicular to the servo making sure to tighten the servo arm screw.
- Attach the L brackets to the servos, and then bolt the assembly to the hatch using the provided hardware, making sure to follow the orientation described in the above steps.



- Assemble the Aileron linkage; the linkage should measure 3 3/4" (95 mm) in length from center to center of the ball link and clevis.
- For the Aileron servo, the clevis should be connected to the hole in the horn that is closest to 25/32" (20 mm) from center of the spline.
- Assemble the Flap linkage, the linkage should be 3 3/4" (95mm) in length from center to center of the clevis and the ball link.
- For the Flap servo, the clevis should be connected to the hole in the horn that is closest to .525" (13 mm) from center of the spline. Make sure to use keepers on the clevis.
- Pull the servos extensions through the wing to the roots; label the servo wires for Ailerons and Flaps. It is recommended to use servo keeper clips when make connections to the extensions.
- Repeat procedure for the other wing.
- When completed check the operation of the ailerons and flaps to make sure that there is no binding.

Step 9: Vertical fin and rudder servo installation

Production models have the servo slots and the control horn slots precut as shown

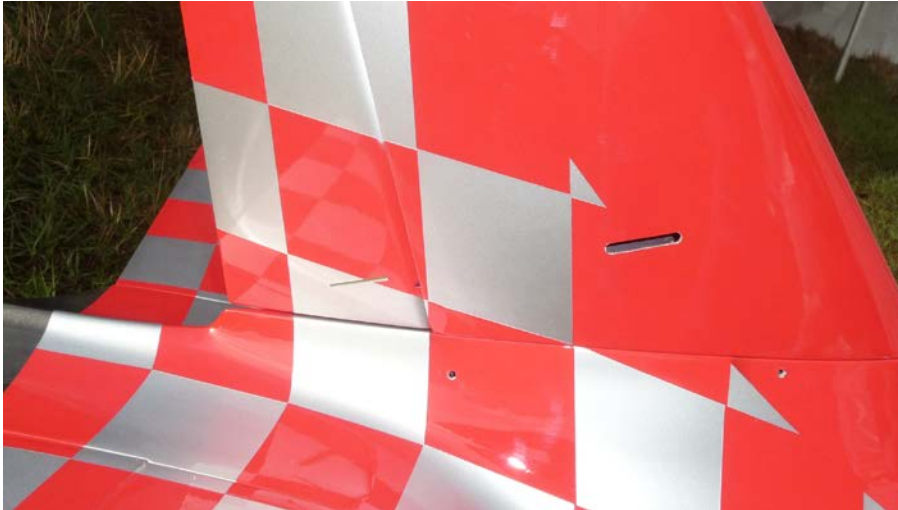

- The servo is installed in the fin with the spline of the rudder servo facing towards the base of the fin and closest to the leading edge. It is not recommended to use grommets for servo mounting into jet airframes as vibrations typically associated with reciprocating power plants are not an issue. It may be required to create a servo wire access hole in the mount, see photo.



- Use sheet metal type servo screws to mount the servo, after installing the screws, remove them and apply a drop of thin CA to each of the holes to reinforce the plywood, reinstall screws after the CA sets up.
- Prepare to glue in the control horn, the horn should be glued in with Hysol, before doing so make sure to use medium grit sand paper or a Dremel tool to roughen up the area on the horn where the adhesive will make contact.
- A uniform adhesive fillet should be created around the control horn and the control surface. It is helpful to use masking tape around the periphery of the control horn slot. Any extra adhesive should be removed. Let the control horn adhesive setup undisturbed before proceeding.
- Using a receiver or servo driver, find servo neutral and attach a suitable single sided servo arm perpendicular to the servo making sure to tighten the servo arm screw.



- Assemble the rudder linkage; the linkage should measure 4.5" (114 mm) in length from center to center of the ball link and clevis.
- The clevis should be connected to the hole in the horn that is $\frac{3}{4}$ " (19 mm) from center of the spline. Make sure to use keepers on the clevis. If using the ball link on the control horn end, make sure to use the ny-lok type nut on the bolt.
Note: you may need to enlarge the hole in the control horn with a .118" (3 mm) drill for the connecting bolt, do not oversize the hole as this will lead to linkage slop. Do not over tighten this bolt as it could cause linkage binding.
- Trial fit the fin to the fuselage; secure both of the clamp bolts on the fin.
- Check operation of the rudder to make sure that there is no binding.

Step 10: Horizontal Stabilizer and Elevator servo installation

Production models have the servo slots and the control horn slots precut as shown



- The servo is installed in the horizontal stabilizer with the spline of the servo facing towards the tip of the stabilizer and closest to the trailing edge.



- Use sheet metal type servo screws to mount the servo, after installing the screws, remove them and apply a drop of thin CA to each of the holes to reinforce them, reinstall screws after the CA sets up.
- Prepare to glue in the control horn, the horn should be glued in with Hysol, before doing so make sure to use medium grit sand paper or a Dremel tool to roughen up the area on the horn where the adhesive will make contact.
- A uniform adhesive fillet should be created around the control horn and the control surface. It is helpful to use masking tape around the periphery of the control horn slot. Any extra



adhesive should be removed. Let the control horn adhesive setup undisturbed before proceeding.

- Using a receiver or servo driver, find servo neutral and attach a suitable single sided servo arm perpendicular to the servo making sure to tighten the servo arm screw.
- Assemble the elevator linkage; the linkage should measure 3.45" (88 mm) in length from center to center of the ball link and clevis.
- The clevis should be connected to the hole in the horn that is $\frac{3}{4}$ " (19 mm) from center of the spline. Make sure to use keepers on the clevis. If using the ball link on the control horn end, make sure to use the ny-lok type nut on the bolt.
- Note: you may need to enlarge the hole in the control horn with a .118" (3 mm) drill for the connecting bolt, do not oversize the hole as this will lead to linkage slop. Do not over tighten this bolt as it could cause linkage binding.
- Trial fit the horizontal stabilizers to the fuselage; checking the fit of the securement bolt.
- Check operation of the elevators to make sure that there is no binding.

Step 11: Equipment Installation

There are many possibilities for mounting equipment into your airframe and it is up to the builder to determine the best installation technique for their application.

The pneumatic retract system in the model used to write this manual was operated utilizing the optional Electronic valves. The dual action valve operates the retracts, and the single action valve operates the brakes. The receiver is positioned on the main tray with the electronic pneumatic valve equipment mounted directly below the main tray on the fuselage floor.

The layout of components is shown in the photo. This arrangement allows easy access, provides good separation between the turbine and receiver electronics and sits low enough for the cockpit to easily fit on top.

Addition component locations for ancillary devices such as the ECU, fuel shut off valve, etc. to name a few can be accomplished using mounting plates glued to the fuselage in positions where space allows.

Now is a good time to complete installation of all servo extensions, airlines and turbine electronics through the fuselage.


The prototype used airline fitting supplied with the kit mounted in the wing root area of the fuselage, the airline connectors from the wing were left loose in the wing to allow connection to the ridged mounted fuselage connectors.



Airline connectors located in fuselage root section along with builder supplied D-type servo connector.




Front equipment tray

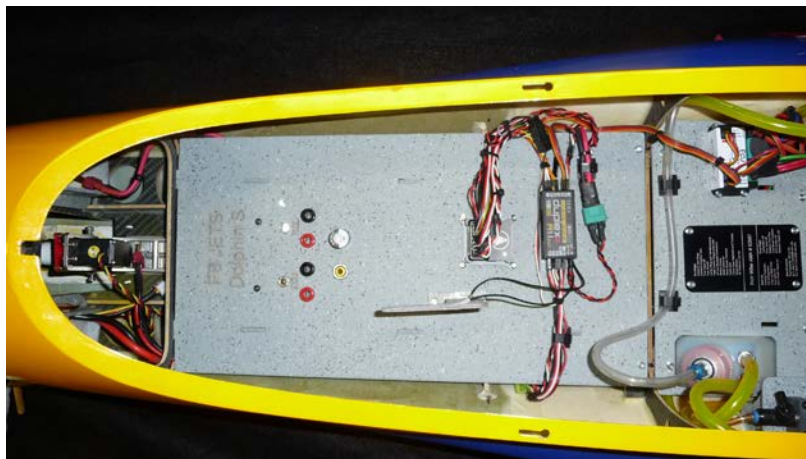

Location for electronic solenoid valves under front tray

Plywood pads glued into place

Tray secured to pads

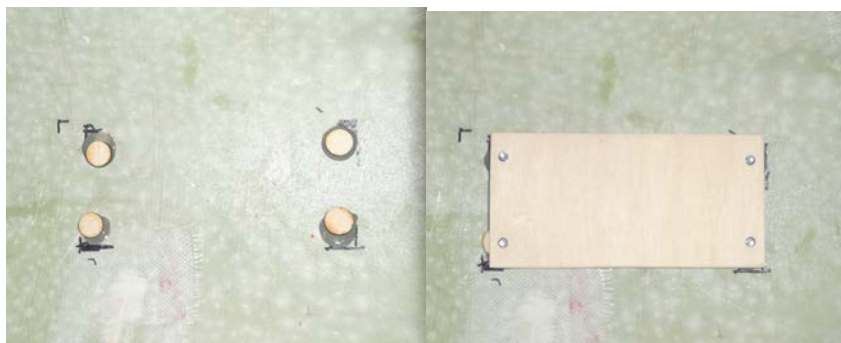




Step 12: Turbine Mounting Rails and Tail Pipe

Vacuum the fuselage thoroughly to remove any debris before installing the turbine. If you need to trim anything for turbine clearance, use a vacuum while you work. This will reduce the chance of having foreign objects finding their way into your turbine, remember to always use a FOD screen.


- The tail pipe was provided with the bell mouth and mounting tabs preinstalled, if not installed by the factory, then mount the bell mouth to the pipe using at least four mounting bolt point positions for securement. Use ny-lok type nuts on the mounting bolts.
- The mounting tabs are positioned just above the centerline of the pipe. Insert the pipe into the fuselage and position the aft end of the pipe flush with the fuselage exit.
- Position the Turbine on the mounting rails. Set the gap between the rear of the exhaust cone and the mouth of the pipe to manufacturer's specifications. This is typically around 25 mm, see photo.

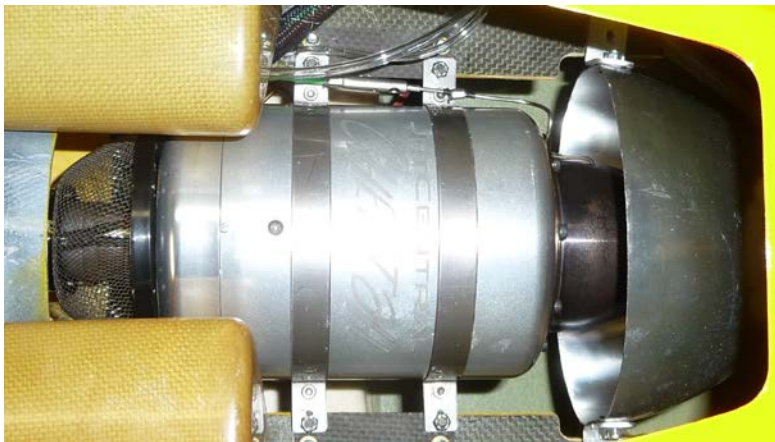

- When you are satisfied with the fit up, mount the turbine to the mounting rails; you can use appropriately sized wood screws or install builder supplied allen bolts and blind nuts. If using wood screws install the screws into the rails and then remove, coat the thread holes with thin CA. This will harden the wood around the screw holes themselves. Permanently reinstall the engine mounting screws. You may need to fabricate a mounting plate adapter depending on the width of the turbine mounting tabs. The installation shown used 1/16" (1.5mm) 6061 T6 aluminum sheet stock.

Step 13: Turbine Accessory Installation

For ease of maintenance, especially for turbines that utilize separate components it is recommended that the major turbine fuel handling components such as the pump, & solenoids, should be mounted on a removable plywood plate. Also the ECU should be mounted for easy access, see photos; follow the Turbine manufactures recommendations for equipment connections.

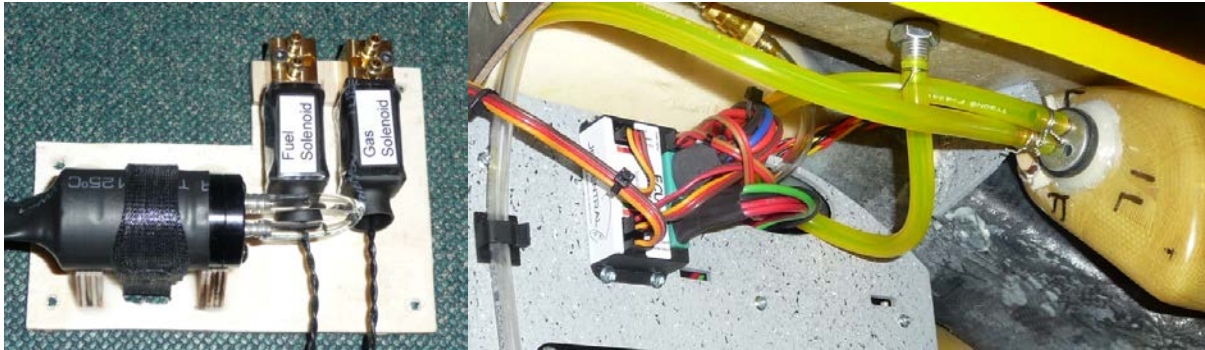

Step 14: Cockpit

The optional semi scale cockpit tub comes pre-trimmed and painted along with the preinstalled canopy glass to the frame.

- ❑ Check fit of canopy frame to fuselage, adjust fitment where required, the canopy latch should engage with little effort when fitment is correct.
- ❑ If not preinstalled, the cockpit should be screwed to the canopy frame using small screws shown with black arrows. The Yellow Arrows in the front point to the two allen head bolts used to key the canopy to the fuselage slots, the yellow arrows in the rear point to the locating tabs that key into slots located on the fuselage. The canopy latch is preinstalled and is located in the rear edge of the canopy.



- ❑ The Bolt key slots shown in fuselage may require a bit of fitting. The front notch may also require some fitting to make sure canopy sits flush. After fitting make sure rear latch engages freely.





Step 15: Radio Channel Assignments

The prototype was set up utilizing 11 channels as follows, many radio system and option exist, it is up to the builder's discretion to pick the equipment that best fits their particular needs:

Two channels for Elevators

Two channels for Ailerons

Two channels for Flaps

One channel for Throttle

One channel for Rudder

One channel for Nose wheel steering also Mixed with Retract channel; enabled with Retract Down only, low rate active with flap deployment

One channel for Retracts

One channel for Brakes mixed with Retract channel to be enabled with down Retract only

Step 16: C.G.

Set the Center of Gravity @ 28% of MAC which is 10.14" (257 mm) from of the leading edge of the wing panel at the root. The C.G. should be determined with the UAT filled with fuel and with the gear in the extended position. Battery positioning should be enough to achieve the correct C.G. location without adding dead weight.

Note: To simplify the process of determining the C.G. the author created two plywood fixtures that can be inserted between the wing panels and the fuselage, see photo. The Airframe then can be lifted with a strap on the C.G. point to allow easy adjustments.





Step 17: Setting of throws

- Elevator should be set values shown in table as measured from the center line of the outboard edge (Tip).
- Aileron should be set values shown in table as measured from the center line of the outboard edge (Tip).
- Flap throw set values shown in table as measured from the center line of the inboard edge (Root).
- Rudder throw set values shown in table as measured from the center line of the inboard edge (Tip).
- Nose Steering should be setup with dual rates to the minimal movement to avoid over steer during takeoff and landings, the prototype was set with low rate with the deployment of flaps.

D/R Throws	High Rate	Low Rate
Elevator @ Outer Tip	0.7" (18)	0.5" (13)
Aileron @ Outer Tip	0.5" (13)	0.3" (8)
Rudder @ Outer Tip	0.7" (18)	-



Throws	Flight	Take Off	Landing
Flap @ Root	0	0.6" (15)	1.45" (37)
Crow (Up Air) @ Tip	0	0	0.15" (3.8)

Measurements in braces () are millimeters



Maintenance Tips:

- When inverting the aircraft, put a short piece of fuel tube with a plug on the drain fitting.
- Cycle the gears before each flying session, checking for binding and proper operation.
- Check the struts for play, indicating the clamping set screw needs to be tightened, verify toe in on main wheels for reliable tracking.
- Check all hinged surfaces; i.e. pull on them before each flying session
- Check for proper radio operation, slowly cycle all surfaces with the transmitter making sure they are moving in the correct direction and proper deflection(**Note:** it is easy to lose a model due to a simple mistake of selecting the wrong model memory in the transmitter)
- Check all linkages, use keepers on the quick links
- Check wing mounting nuts for tightness
- Check Vertical fin clamp bolts for tightness
- Check Horizontal fin mounting bolts for tightness
- Check Fuel system for leaks
- Check all batteries before each flight, setup a routine maintained schedule on your batteries making sure that they cycle properly for capacity.
- Note do not charge LiPo batteries while installed in the airframe, the battery boxes provide easy removal of batteries for charging.


Congratulations, you have completed construction of your Fei Bao Dolphin S

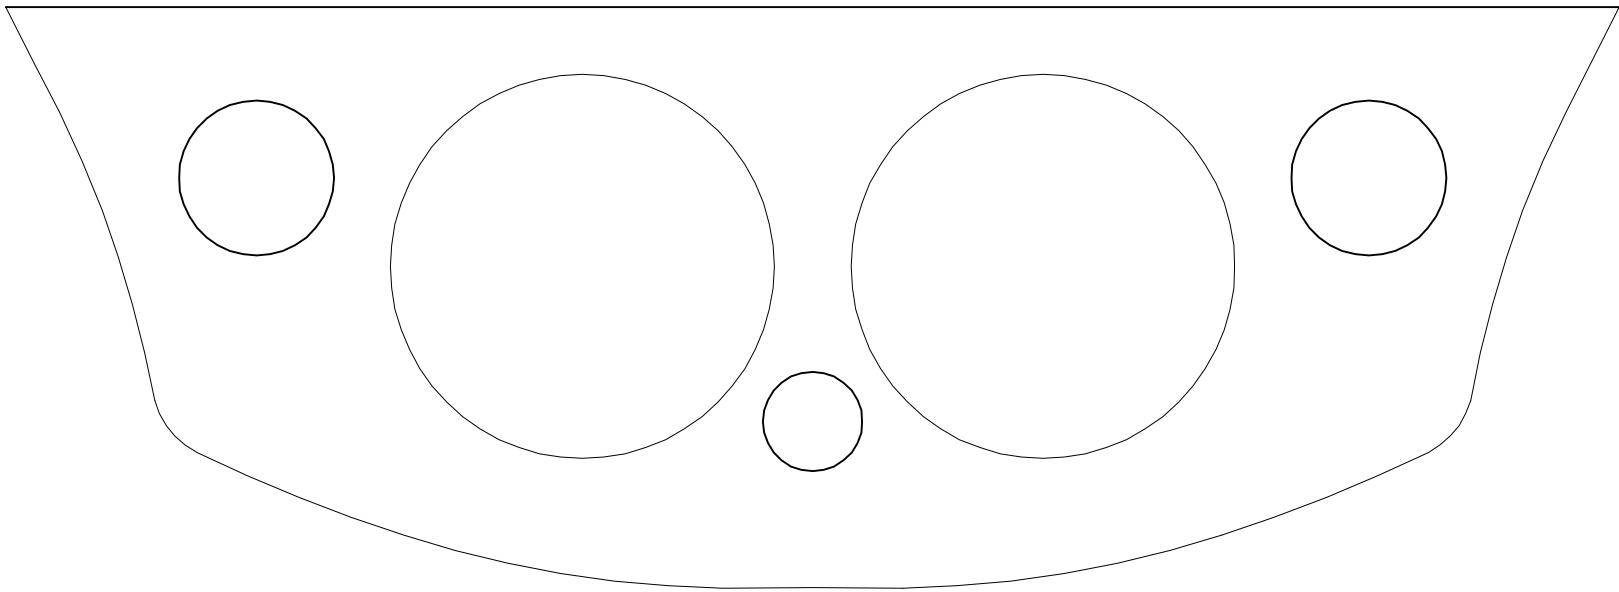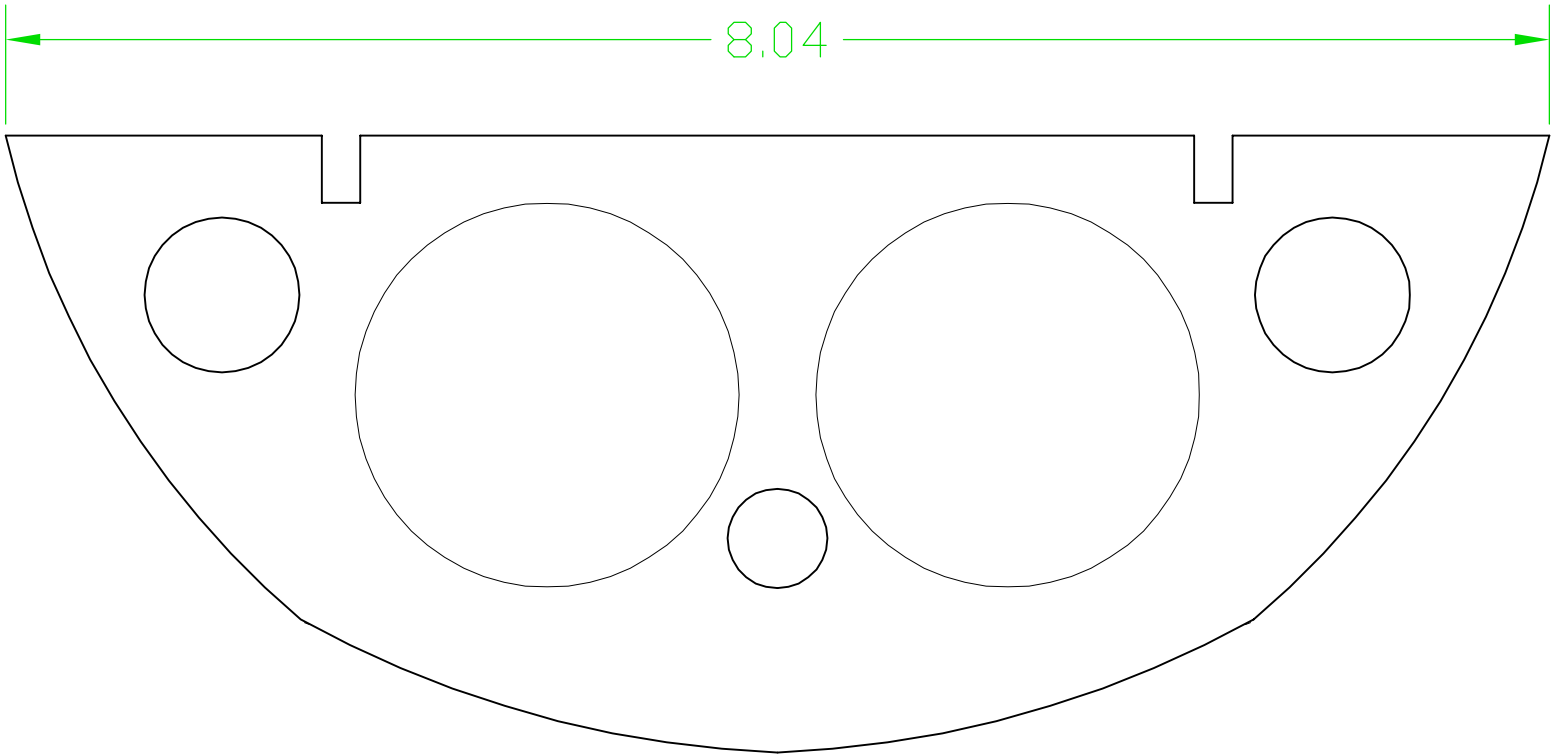


Air Tank
Mounting

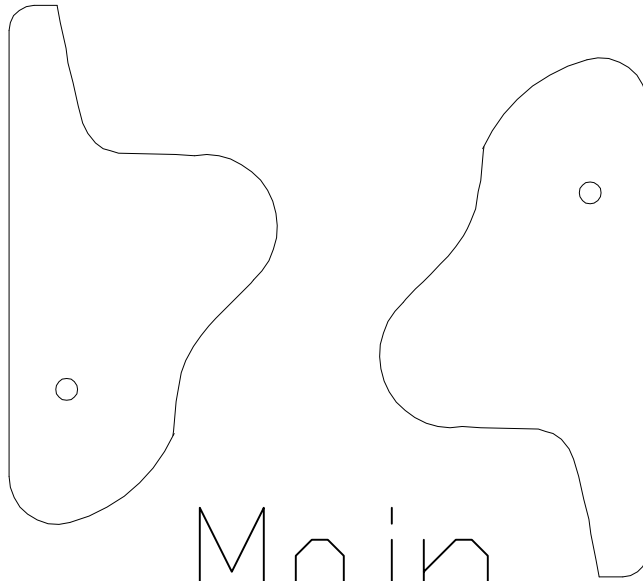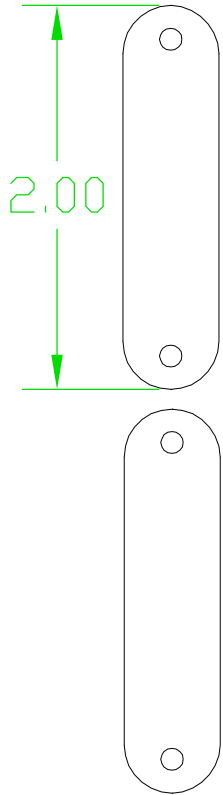


Main
Tank
Mounting

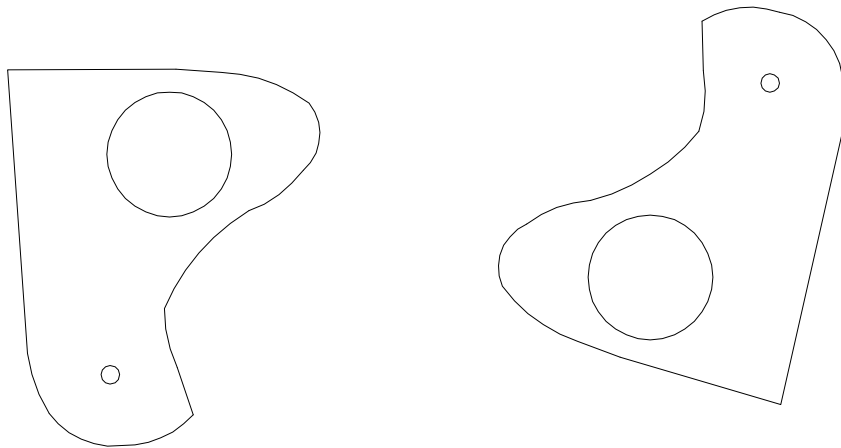



Saddle
Tank
Mounting

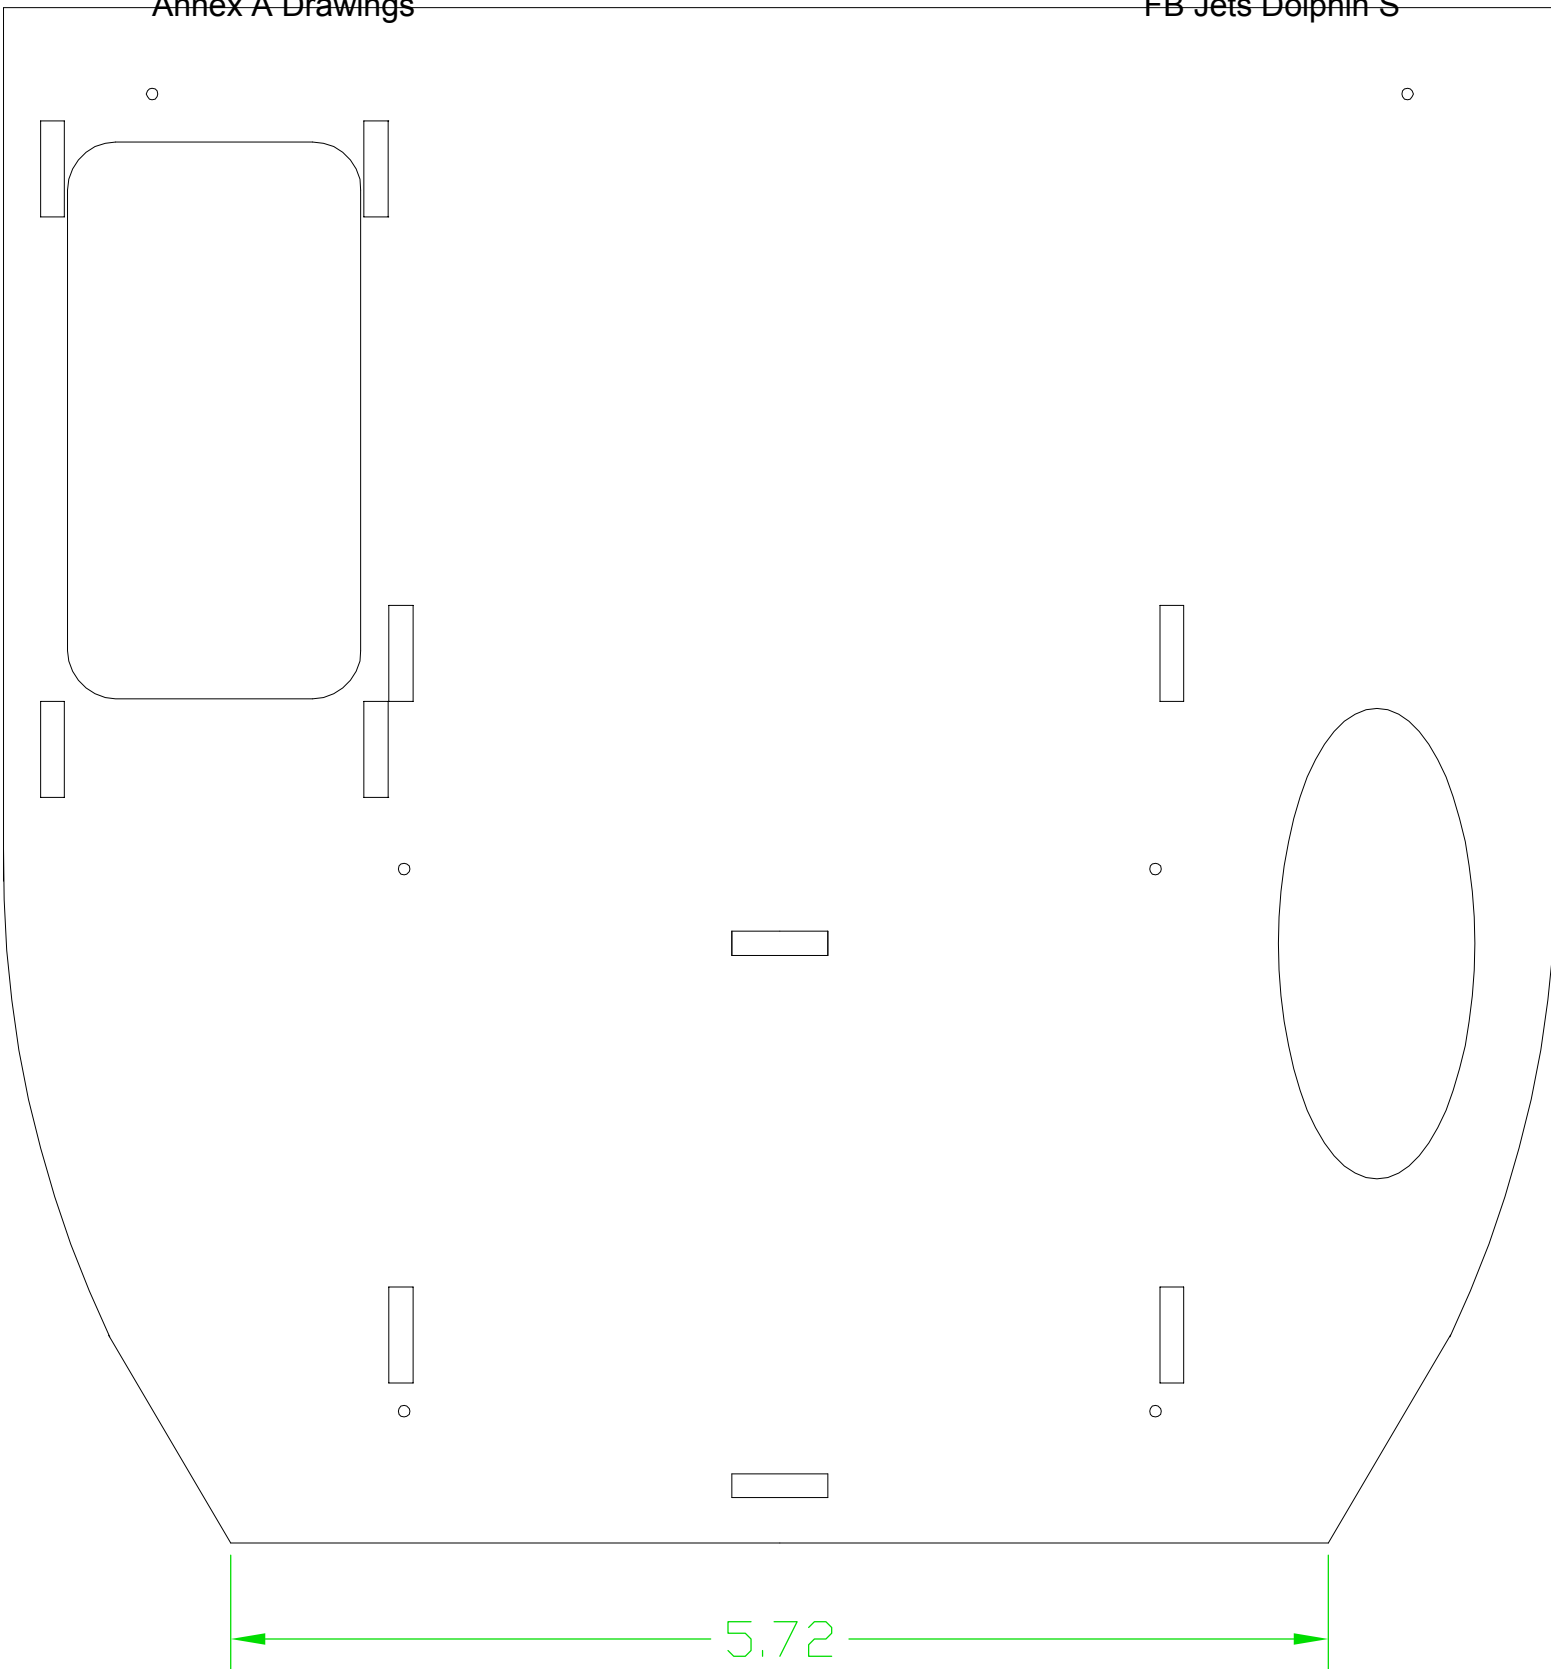

Main Tank Tray and
UAT Mounting


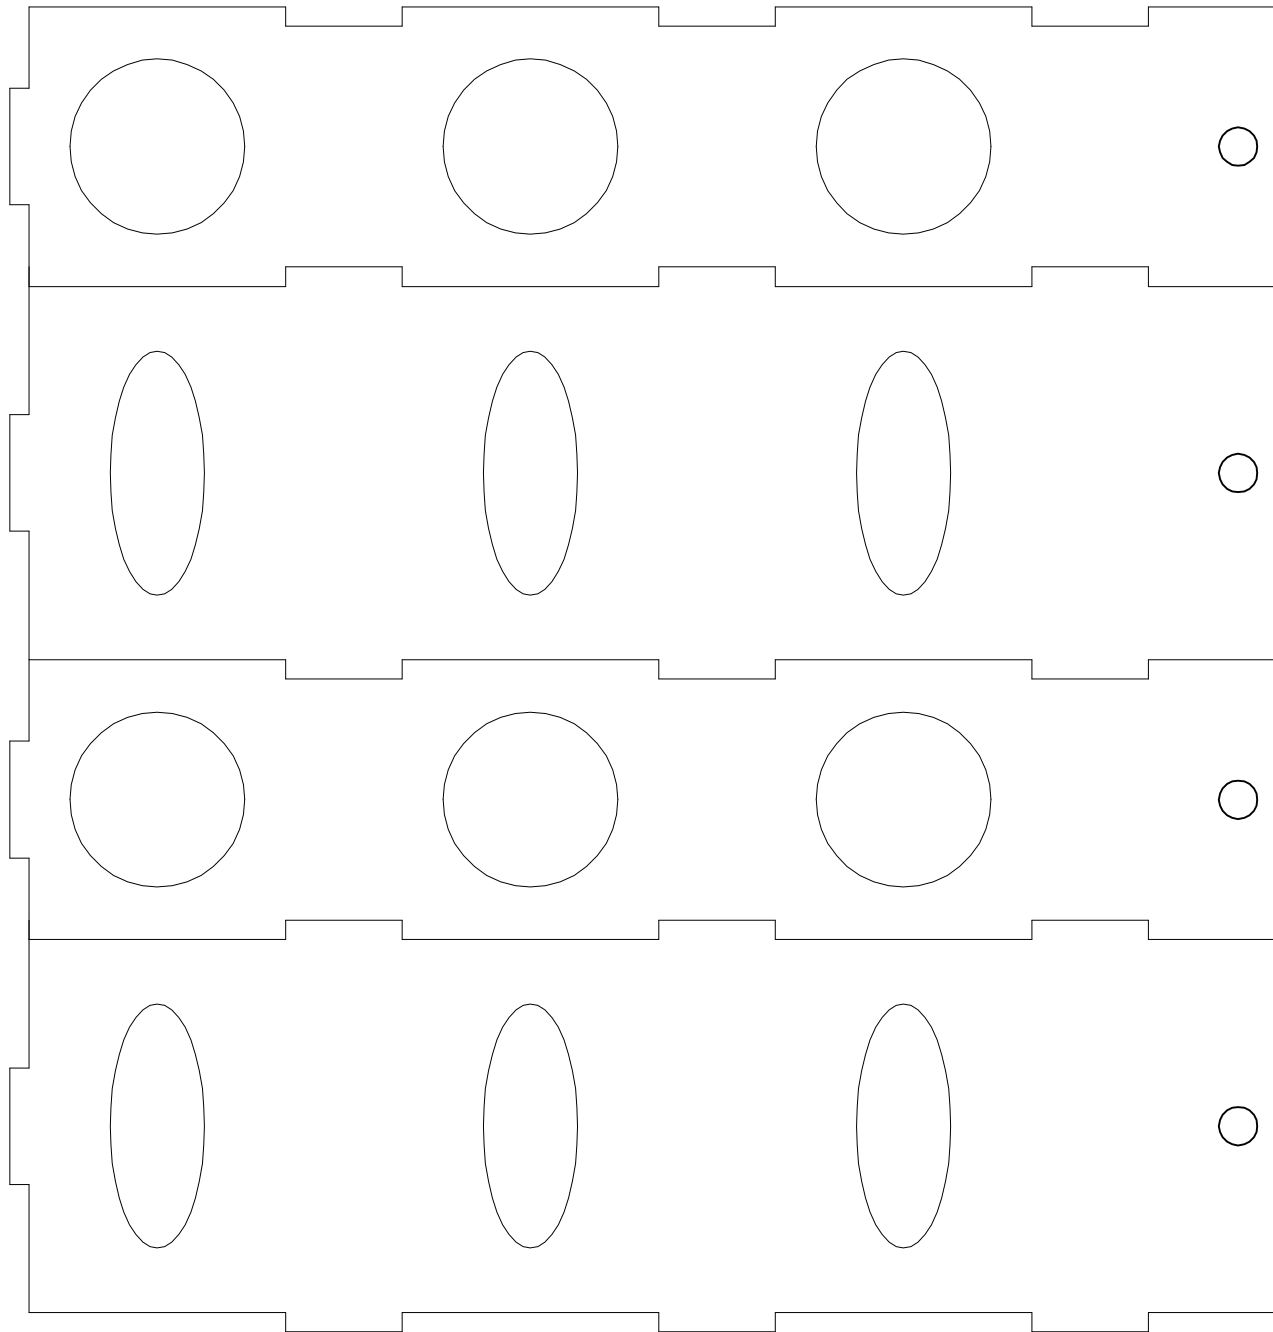


(2 sets) Battery Box

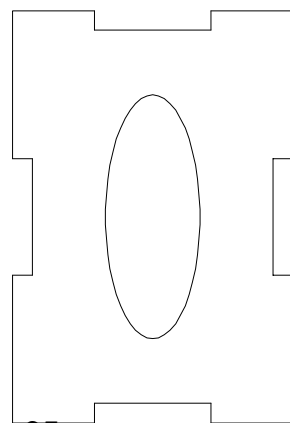
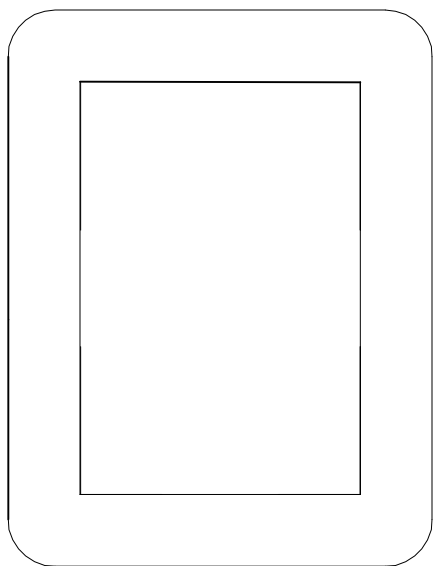


Annex A Drawings



FB Jets Dolphin S

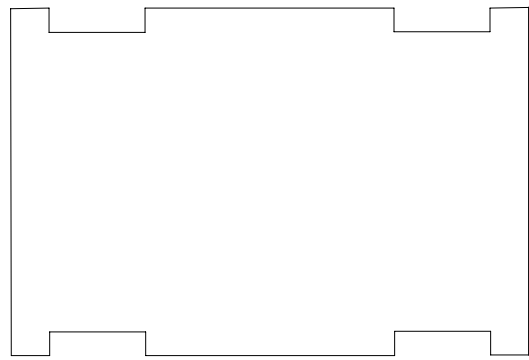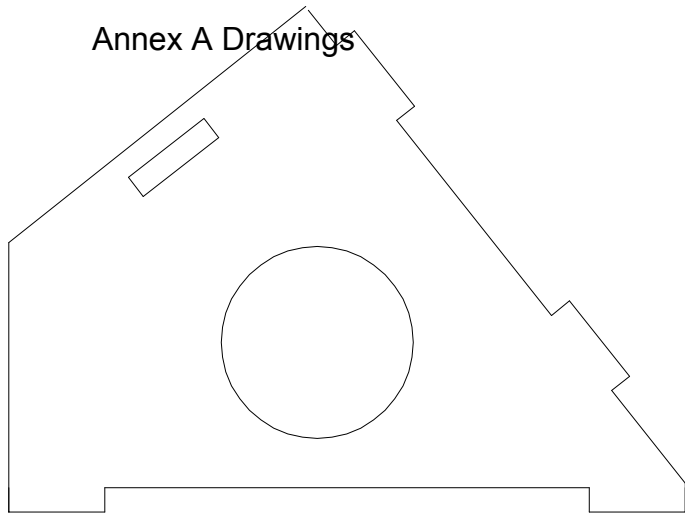





UAT Mounting

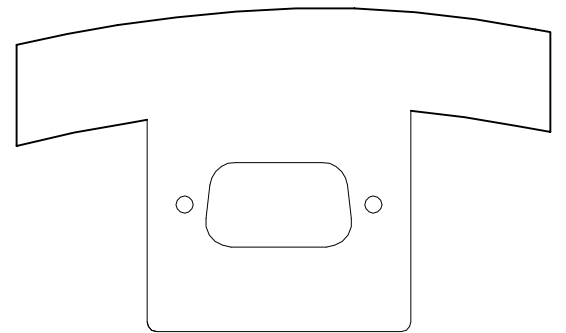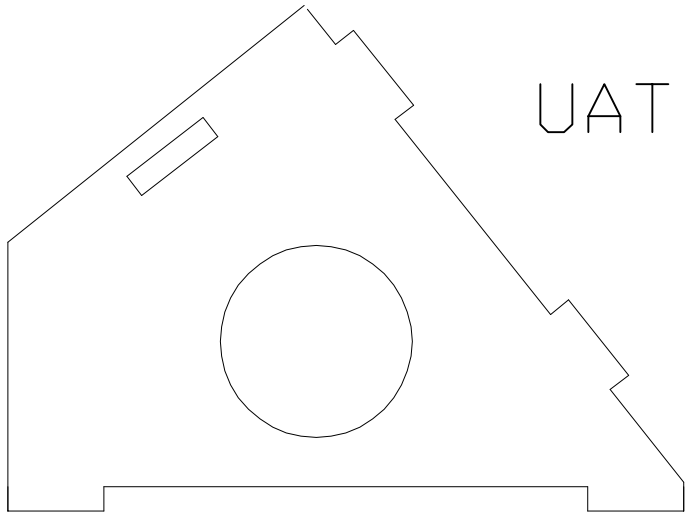


Bulk Head Connector bracket

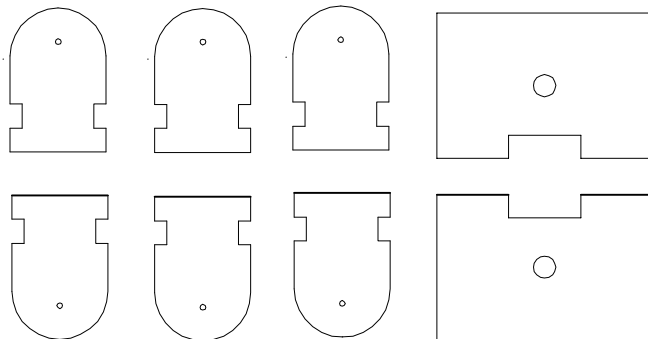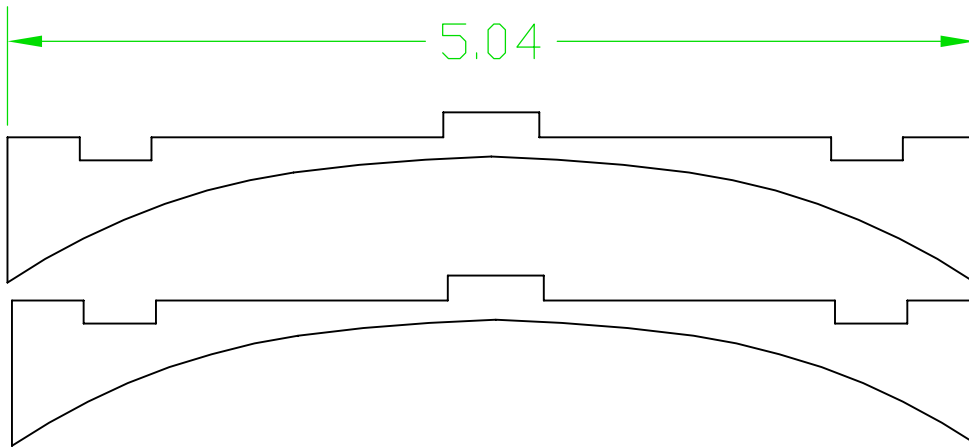



Main Tank ³⁶ Shelf Mounting

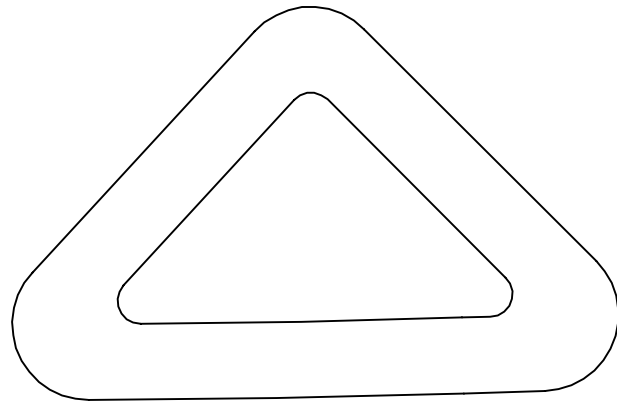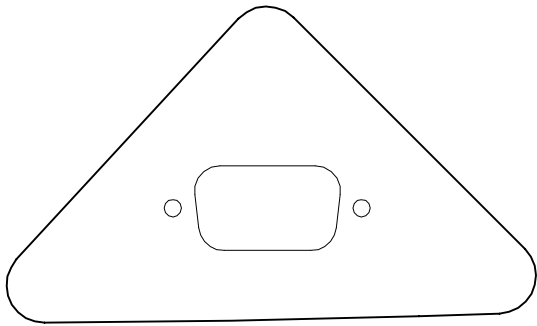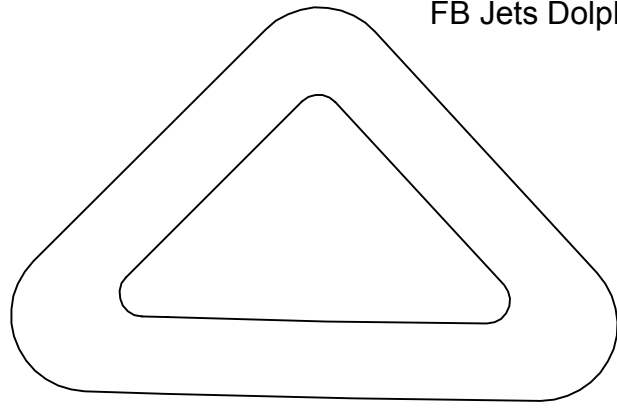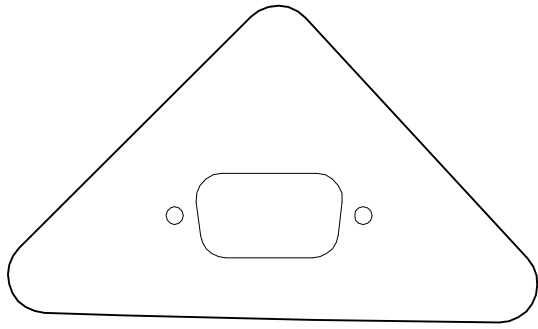


Wing servo connector
Mounting

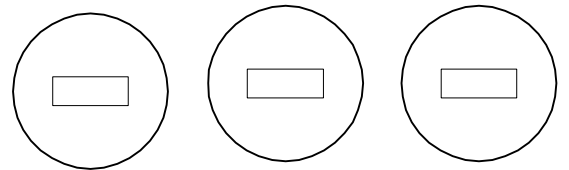

Tail servo
connector
Mounting

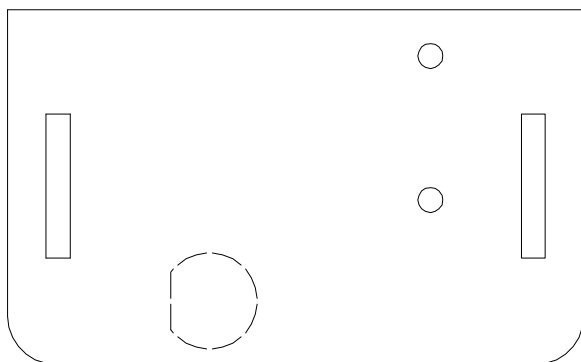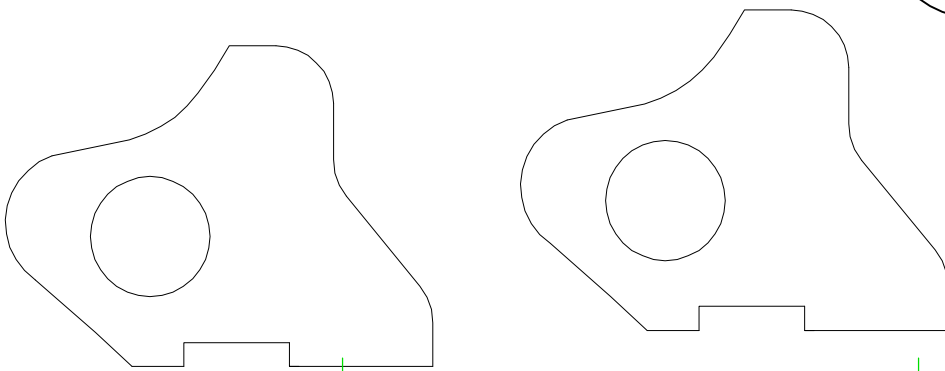

Festo Fuel³⁷ Valve Mounting

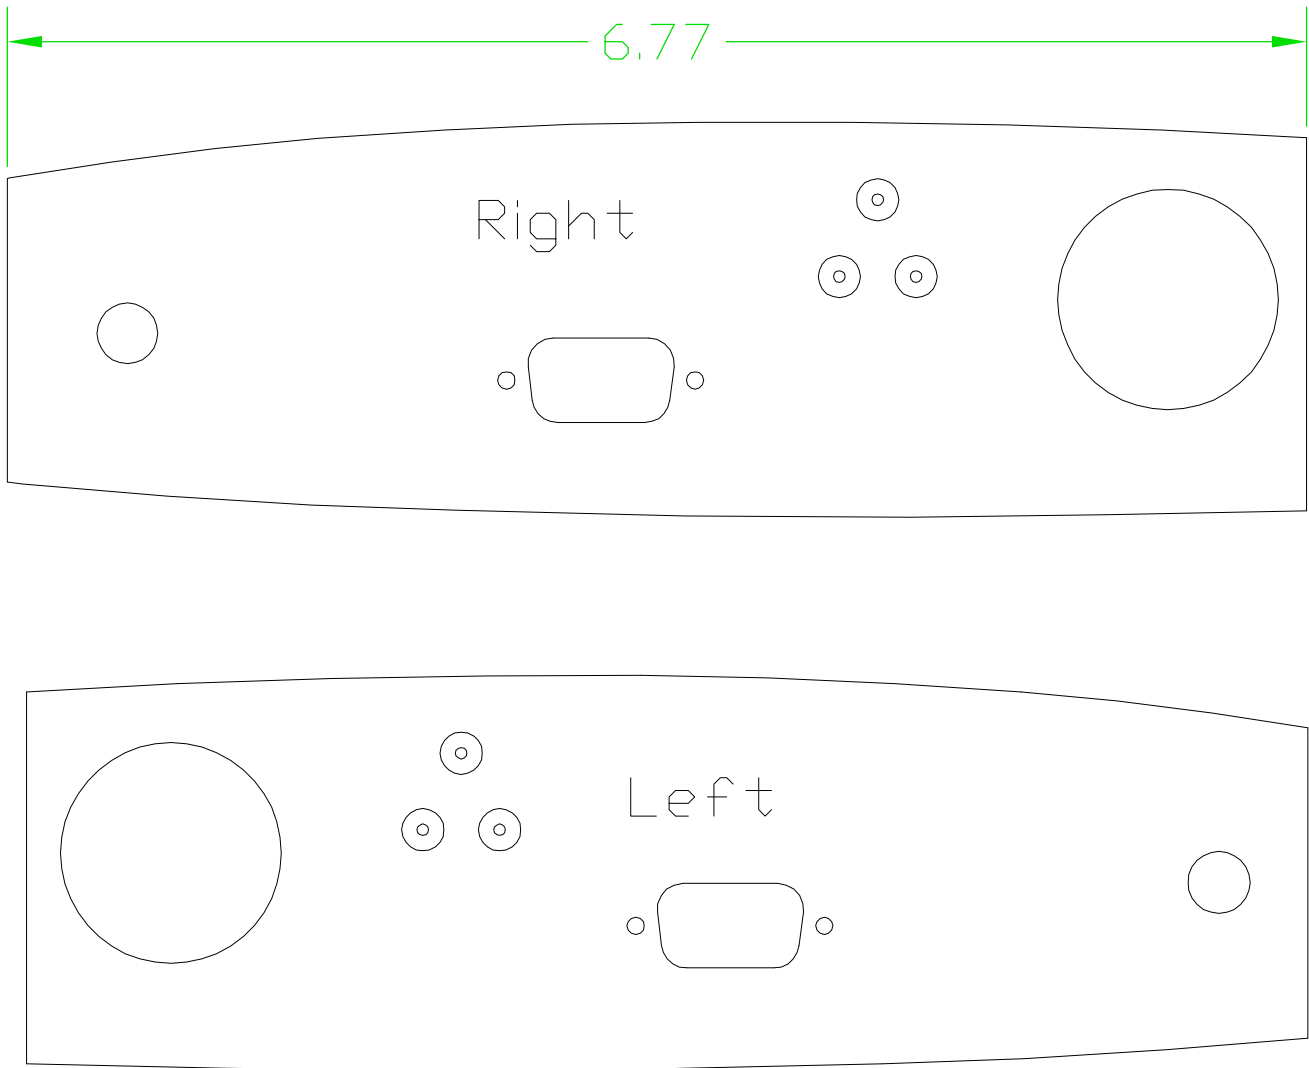

Servo Connector
and air line
connectors
Drilling Template
for fuselage

