

Status on NavView

Please Note: Values are shown added in the NavView Column.

Hint: In GigaControl place the cursor on the column and a small popup will show the meanings as well.

Status value TX-Module:

Value	Meaning
1	Scan mode active
2	Range test active
4	Binding active
8	HF-Connection (Bidirectional)
16	
32	the ext. Transmitter transmits correct frames
64	Battery low
128	Transmitter is on unidirectional mode
256	Quickbind
512	USB connection
1024	SD-card inserted
2048	SD-card on use
4096	RTC valid
8192	Range warning
16384	Temperature warning
32768	USB voltage ok.
65536	(TX module: manually country code is active)
131072	Binding button is pressed
262144	Range test button is pressed

Status value on RX:

Value	Meaning
1	Scan mode active
2	Range test active
4	Binding active
8	HF-Connection ok (uni or bidirectional mode)
16	==0 Battery 1; ==1 Battery 2
32	Failsafe active
64	Battery low
128	The RX is on unidirectional mode
256	
512	USB Connection
1024	SD-card inserted
2048	SD-card in use
4096	RTC valid
8192	Range warning
16384	Temperature warning
32768	USB voltage ok
65536	Servo synchronization is active
131072	Gyro calibrations
262144	Error on Gyro calibration
524288	GPS valid signal
1048576	Error on last battery test
2097152	Backup battery was used at least one time
4194304	Wrong data from TX
8388608	Servo synchronization active
16777216	Failsafe test active
33554432	Initializing
67108864	Servo test active at least on one channel