 



## INFO: SERVO excitation

From version V2.58 (RX firmware as well as GigaControl) on the excitation of servos can be adjusted. Connect your TX module to Gigacontrol and go to the Receiver COnfiguration tab.

check the box:



synchronous SERVO excitation:

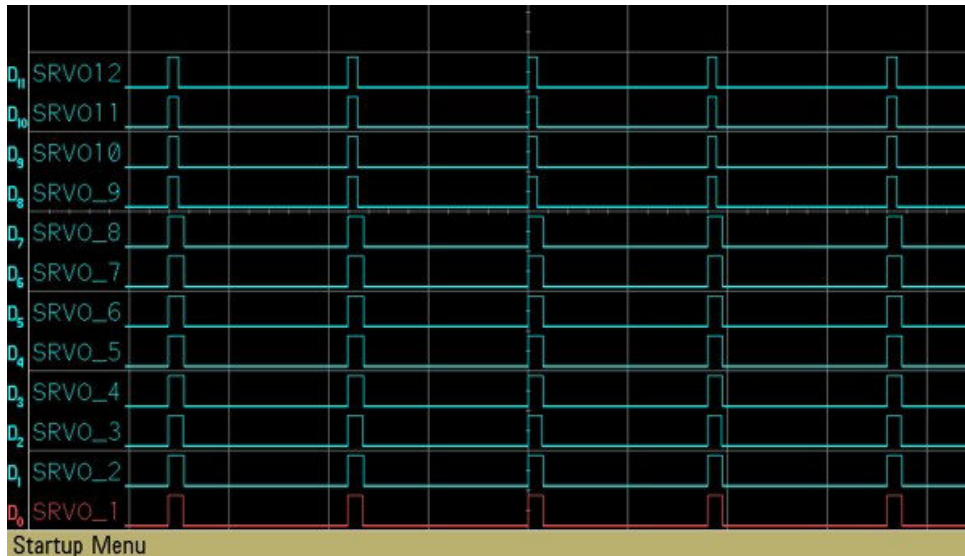

asynchronous SERVO excitation:

